
Top Pro User Guide





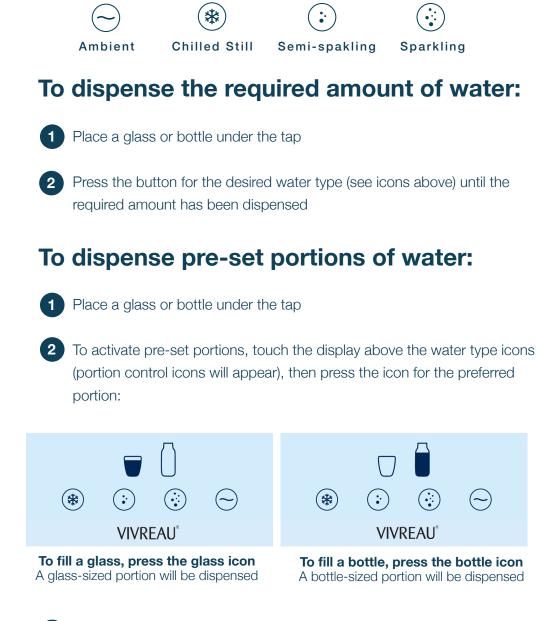

Press the button for the desired water type (see icons above). The required amount of water will be automatically dispensed into the glass or bottle. Press any button again to immediately stop dispensing



3

To deactivate portion control, press the glass or bottle icon again. Once neither icon is displayed, portion control has been deactivated